

B737-300

LOAD INSTRUCTION REPORT

PREVISION						
SOUTE 1			Ailes	SOUTE 4		
Compartment 11	Compartment 12	Compartment 13		Compartment 41	Compartment 42	Compartment 43
Max 763	Max 388	Max 1118		Max 2337	Max 414	Max 718
		LXR/M/70		LXR/BY/1350/R		LXR/C/400 LXR/E/65.BEH LXR/C/4.NWP
Porte Soute				Porte Soute		

FINAL						
SOUTE 1			Ailes	SOUTE 4		
Compartment 11	Compartment 12	Compartment 13		Compartment 41	Compartment 42	Compartment 43
Max 763	Max 388	Max 1118		Max 2337	Max 414	Max 718
		LXR/M/70		LXR/BY/1535	LXR/BY/115/R	LXR/C/400 LXR/E/65.BEH LXR/C/4.NWP
Porte Soute				Porte Soute		

LOADING INSTRUCTIONS

Bonjour, Chargez tous les bagages dans le compartiment 41, le colis de cargo de 400kg ainsi que la civière et les journaux en compartiment 43. Enfin, mettre les sacs de poste en compartiment 13. Merci

Commodity

 
BY	Bagage Economique
BC	Bagage Business
BF	Bagage First
C	Cargo
M	Mail
E	EIC

B

OA
5 PAX

OB


OC
5 PAX



OA
5 PAX

OB

 OC
5 PAX



E → ARCHIVE ESCALE BLEU → DIVERS

